

Register your product
and get support at
www.philips.com/welcome

SRP3004/53



EN User Manual

PHILIPS

Table of contents

1	Your SRP3004	3
2	Getting started	4-7
	2.1 Inserting the batteries	4
	2.2 Setting up the universal remote control	4-7
3	Using the universal remote control	8-11
	3.1 Buttons and functions	8-10
	3.2 Resetting a button to its original function	10-11
4	Service and support	11-13
	4.1 Frequently asked questions	11-13
	4.2 Need help?	13
	Helpline	13
	Brandlist	14-27
	Information to the consumer	28
	Compliance with EMF	28
	Recycling and disposal	28
	Battery information	28

1 Your SRP3004

 
Congratulations on your purchase of the Philips SRP3004 universal remote control. After setting up the remote control you can operate up to 4 different devices with it.

Simple Setup

Improved with Philips patented (pending) Simple Setup technology, the SRP3004 can be set up easily for TV, DVD player / recorder, VCR and all common set-top boxes, such as Sky, British Telecom, Orange, Freebox, TNT, Canal Digital, Telefonica, Premiere, Kabel Deutschland, Belgacom TV, Telenet, Viasat and many more.

Simply follow the instructions in chapter 2.2 to set up the remote control for your devices.


To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

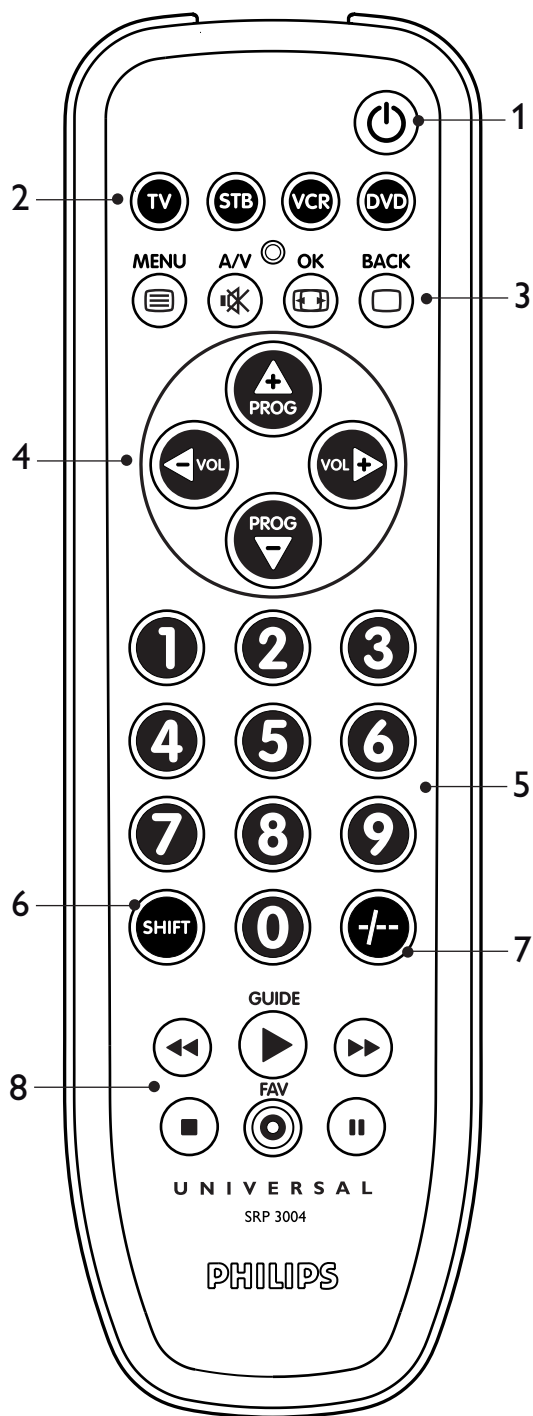

2 Getting started

2.1 Inserting the batteries

 - Insert 2 AAA type batteries, noting the + and - configuration in the battery compartment.

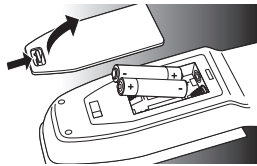

Note

When replacing the batteries, all user settings will be retained in the remote control memory for 5 minutes.

2.2 Setting up the universal remote control


The example below instructs you how to set up your universal remote control for your TV. You can repeat the same steps for other devices (STB, DVD player/recorder and VCR) which you want to operate, using the SRP3004.

The remote control can be set up to operate any 4 of the following devices:


Device name	Description
TV	Traditional TV, flat screen TV and projection TV, TV part of TV / VCR, TV / VCR / DVD and TV / DVD combos
STB	Cable box, satellite receiver; Digital Video Broadcasting Terrestrial device (DVB-T), Internet Protocol TV (IPTV), Free To Air TV, High Definition Television decoder (HDTV)
DVD	DVD player / recorder (DVDR), DVD / Hard Disk Drive combination (DVDR-HDD), Blu-Ray player; High Definition DVD player (HD-DVD), DVD part of TV / DVD, TV / VCR / DVD and VCR / DVD combos
VCR	Video cassette player / recorder; VCR part of TV / VCR, TV / VCR / DVD and VCR / DVD combos

Example: setting up the universal remote control to operate your TV:

- 1 **Switch ON** the TV manually or use the original remote control for this. Tune to channel 1.

- 2 **Press and hold** the  device selection button **for 5 seconds** until it blinks twice and then remains lit.

 - The remote control is now in setup mode.

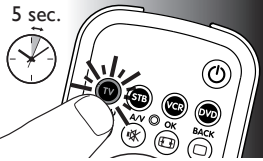


- 3 Look up the 4-digit code for your brand in the brand list at the back of this user manual.




A four-digit code is shown for each brand.

Use the digit buttons to enter the code for your brand:

- The  key will now blink twice and then remains lit.



If the key blinks twice fast, the code has not been entered properly or the wrong code has been entered. In this case, try again.

- 4 Aim the remote control at the TV. **Press and hold** the  button. Release it **immediately** release it as soon the TV switches off.

- This may take up to 30 seconds.



 
- 5 **Switch ON** the TV. Try out the buttons you need for operating it. Try, for example, if the **- PROG +** and digit buttons function properly.



- If a button does not work as expected, **press and hold** that button. Release it **immediately** as soon as it works. For more information, see chapter 2.2.2.

- 6 Press the  device selection button **twice** to finish setup.

- When no button is pressed for 2 minutes or more, the remote control will exit setup mode, automatically saving all your settings.

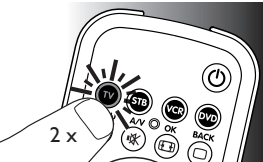




Important

If you made a mistake:

- Press the device selection button **twice** to exit setup.
- Restart from the beginning.

- *If the device does not respond at all or not to all of the button commands or if you cannot find the code for your brand, enter '9, 9, 9, 9' in step 3 and continue with step 4. The remote control will now search its full database for a code that works with your TV. Full database search may take up to 15 minutes.*

2.2.1 Setting up the remote control for other devices (STB, DVD player / recorder and VCR)


- 1 Make sure the device is switched on and operational. E.g. insert a disc in the DVD player / recorder or a video cassette in the VCR.
- 2 Then follow steps 2 to 6 of 'Setting up the remote control for your TV'. Make sure to use the correct device selection button: ,  or .

2.2.2 Improving buttons

When correctly set up, the remote control should be able to operate all your devices. However, when using the remote control for the first time it might occur that some buttons do not yet function as expected.

In this case you can have the remote control search for alternatives.

After initial setup

- 1 Make sure the receiving device is able to respond. E.g. when you try to repair the Play button for your DVD player, make sure to insert a DVD into the DVD player otherwise the Play button is not able to function.
- 2 Select the device you wish to operate (e.g. DVD). Press the  device selection button to select DVD.



- 3 Keep buttons ① and ④ pressed simultaneously for 5 seconds.

 
- The remote control is now in setup mode.

- 4 Press and hold the button that does not function and **immediately** release it when the device responds.

- If the button still does not function as expected, try pressing it again for a longer period of time.

- 5 Press the  device selection button **twice** to save your settings and exit setup mode.

- When no button is pressed for 5 minutes or more, the remote control will exit setup mode, automatically saving all your settings.

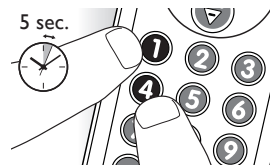

Note

Improving buttons is not possible when the code was found during full database search (with code '9, 9, 9, 9').

During initial setup

- 1 Make sure the receiving device is able to respond. E.g. when you try to repair the Play button for your DVD player, make sure to insert a DVD into the DVD player otherwise the Play button is not able to function.
 - 2 Press the button that does not function, keep it pressed and **immediately** release it when the device responds. Repeat this for every button that does not function.
- If the button still does not function as expected, try pressing it again for a longer period of time.

3 Using the universal remote control

3.1 Buttons and functions

The illustration on page 2 gives an overview of all buttons on the remote control. Try out the buttons you need for operating your devices.





Notes

- Buttons having the same functions as the buttons on your original remote control may have different namings on the SRP3004 (e.g. Info / Display).
- Only functions that are available on your original remote control can be used for operating your devices with the SRP3004.


1  switches the selected device on / off.


Note

For some TV brands / types, this button will only switch off the TV. You will have to press a digit button (direct channel selection) to turn on the TV again.


2     device selection buttons.


- select the device to be operated.
- light up when a remote control command is being sent.

3  DVD:


- switches the disc menu on and off.
- pressed together with : enters the system menu.


TV:


- switches teletext on/off.
- pressed together with : opens the TV menu.


VCR: pressed together with : opens the VCR menu.


STB:


- opens set-top box menu, Box office, List.
- pressed together with : switches teletext on/off.


 mutes the sound of the TV.

- pressed together with : selects external Audio/Video inputs.


 TV:

- selects wide screen TV (16:9).
- pressed together with : confirms your selection.

 
DVD: pressed together with : selects Play mode.

 - jumps back one level in the menu or turns off the menu.


- switches teletext off.

DVD: pressed together with : opens Showview


4



- PROG + - selects a previous or following channel / program.


- pressed together with : cursor up, down in a menu.

- VOL + - adjusts the TV volume.

- pressed together with : cursor left, right in a menu.

5



..... digit buttons for direct channel / track selection. Pressed together with :

1 TV: Info, Display.
DVD/STB: Info, Display, Title.

2 TV/VCR/DVD/STB: exits menu.


4 TV/DVD/STB: selects Subtitle.


5 TV: selects previous picture.
DVD: Recall.
STB: Last.

6 TV/VCR/DVD/STB: Sleep.








7 STB: *.

8 STB: #.

6  for extra functions. When pressed at the same time as a second key, the second key will get another function. Only functions featured on the original remote control are available.

7  selects between one and two-figure channel numbers and channel numbers with more than two or three figures.



- ◀..... TV: red fasttext key.
STB: Red, C.
VCR/DVD/STB: searches fast backwards.
- ▶ / GUIDE VCR/DVD: starts playback.
DVD: pressed together with : selects Electronic Program Guide.
STB: selects Electronic Program Guide. Pressed together with : starts playback.
- ▶▶ TV: blue fasttext key.
STB: Blue, B. Pressed together with : searches fast forward.
VCR/DVD: searches fast forward.
- VCR/DVD: stops playback / recording.
TV: green fasttext key.
STB: Green, D. Pressed together with : stops playback.
- / FAV TV: white fasttext key.
VCR/DVD: starts recording. Pressed together with : favorites.
STB: Favorites. Pressed together with : starts recording.
- ⏸ TV: yellow fasttext key.
VCR/DVD: pause playback / recording.
STB: Yellow, A. Pressed together with : pauses playback.

3.2 Resetting a button to its original function

 
If an improved button (see chapter 2.2.2) still does not function as expected, you can always reset the button to its original function.

- In the current device mode, keep digit buttons **1** and **6** pressed simultaneously for 5 seconds.

- The remote control is now in setup mode.



- Press digit buttons **9**, **9**, and **6**, in that order.
 - After each button press the device selection button blinks once.

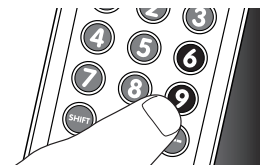

- Press the button you wish to reset **twice**. E.g. the ▶▶ button.
 - After each button press the device selection button blinks once.
 - The device selection button will blink one more time to confirm that the button was successfully reset to its original function.



4 Service and support

4.1 Frequently asked questions

In this chapter you will find answers to the most frequently asked questions about your universal remote control.

4.1.1 Setup

I cannot enter setup mode.

Battery level too low or battery lifetime came to an end.

- Replace the batteries. For this see chapter 2.1.
After replacing the batteries, test if the remote control still operates your devices. If it does not, you have to set up the remote control again. For this refer to chapter 2.2.

The brand code for my device is missing in the 'Shortlist of brands' in the Quick Start Guide.

The 'Shortlist of brands' only mentions the most common TV, STB, DVD player / recorder and VCR brands.

- You will find a complete brand list on page 14-27 of this user manual.
- Use '9999' as 4-digit code in case you cannot find your brand in the complete brand list. Note that using '9999' may result in a long setup (up to 15 minutes).

My TV switches OFF in step 4 but does not switch ON again in step 5.

TVs of some brands (e.g. Panasonic) only switch ON after a long press on one of the digit buttons. After a long button press in setup mode the remote control will start trying to improve the button (see chapter 2.2.2) instead of switching ON the TV.

- In this case, switch ON the TV manually or use the original remote control for this. Continue with step 6. After successfully completing setup, the remote control will switch ON the TV with a long button press on one of the digit buttons, just as your original remote control.

After setup, not all buttons work as expected.

- Try improving the button(s). See chapter 2.2.2.

How do I set the remote control for combo devices (TV / VCR, TV / DVD, DVD / VCR, etc)?

Some combo devices require you to set up two different source selection buttons to control both parts of the combo device. For example, if you have a TV / DVD combo, you might need to set up the remote control for both TV and DVD to operate your TV / DVD combo.

4.1.2 Operation

The remote control does not wake up anymore.

Battery level too low or battery lifetime came to an end.

- Replace the batteries. For this see chapter 2.1. After replacing the batteries, test if the remote control still operates your devices. If it does not, you have to set up the remote control again. For this refer to chapter 2.2.

The device I want to operate does not respond at all / does not respond to all of the button commands.

- Check if the buttons you press are available on the original remote control of the device.
- Try improving buttons. See chapter 2.2.2.




Wrong code selected during setup.

- Set up the remote control again for the device. Always test if the device responds, before leaving setup mode.

It may be that the buttons that you are trying to use have a different naming on the original remote control.

- Try out all buttons to find the one(s) you need.

The Teletext buttons do not work.

- Find out whether your TV is equipped with Teletext.
- Try improving the Teletext buttons. See chapter 2.2.2.
- Check whether you are using the correct buttons to switch on Teletext. For TV this is the  button; for STB this is the  button, pressed together with .

4.1.3 Batteries

Will my settings be deleted when I replace the batteries?

No. All user settings will be retained in the remote control memory for 5 minutes.



Warning

The batteries should not be exposed to excessive heat such as sunshine, fire or the like.

4.2 Need help?

We advise you to first read this user manual carefully. It is provided to help you set up and use the remote control.

If, however, you require extra information or have additional questions about setup, usage, spare parts, warranty, etc. of the SRP3004, you can always contact us.

When calling our helpline, make sure to have the SRP3004 at hand when you call, so that our operators can help you determine whether the SRP3004 is working properly.

You will find our contact details at the end of this user manual.

The model number of your Philips universal remote control is SRP3004/53.

Date of purchase:

...../...../.....
(day/month/year)

For **online support** go to: www.philips.com/welcome.

- Click 'Support' and follow the on-screen instructions.



Helpline

Country	Phone number	Tariff
Ireland	01 601 1158	psn
United Kingdom	0800 331 6015	free

A	Ampere.....0134	Axis.....0300	British Telecom.....0427
A.R. Systems.....0012	Amplivision.....0138	Ayomi.....3525	Broadcast.....0428
1&1.....3908	Amstrad.....0140	B	Broco.....0431
4Kus.....0005	AMW.....0143	Baird.....0311	Bruns.....0435
AB Sat.....3689	Anam.....0146	Bang & Olufsen.....0314	BSkyB.....0436
ABC.....0013	Anam National.....0147	Barcom.....0320	BSR.....0437
Acme.....3521	Andover.....0149	BARON.....3959	BT.....0438
Acura.....0036	Anglo.....0151	Basic Line.....0325	BT Cable.....3995
ADA.....0038	Anitech.....0154	Bastide.....0327	BT Satellite.....3693
ADB.....0039	Ankaro.....0155	Baur.....0331	BT Vision.....3742
ADC.....0040	Ansonic.....0156	Baze.....0334	BTC.....0439
Addison.....0043	Anttron.....0162	Bazin.....0335	Bubu Sat.....0440
Adelsound.....0044	AOC.....0165	BBK.....0337	Bush.....0445
Admiral.....0046	Apex.....3691	BBT.....0338	BVV.....0447
Adyson.....0058	Apollo.....0171	Beijing.....0345	C
AEG.....0059	Arc en Ciel.....0178	Beko.....0346	Cabletime.....0457
Aegir.....0060	Arcam.....0179	Belgacom TV.....0349	Caihong.....0462
Agashi.....0063	Arcam Delta.....3524	Bell Atlantic.....0351	Cambridge.....0469
Agazi.....3522	Arcon.....0182	Bellagio.....0354	Cambridge Audio.....0470
AGB.....0064	Ardem.....0184	Benjamin.....0358	Cameron.....4032
AGS.....0067	Aristona.....0192	Benq.....0359	Camundosat.....0474
Aiko.....0069	Armstrong.....0195	Beon.....0361	Canal Digital.....0476
Aim.....0070	Arthur Martin.....0200	Best.....0364	Canal Satellite.....0477
Airis.....0071	ASA.....0202	Best Buy.....0365	Canal+.....0478
Aiwa.....0072	Asat.....0204	Bestar.....0368	Capsonic.....0486
Akai.....0074	Asberg.....0205	Bestar-Daewoo.....0369	Carad.....0488
Akiba.....0078	ASLF.....0211	Binatone.....0378	Carena.....0489
Akito.....0082	Asono.....0212	Birmingham Cable	Carrefour.....0492
Akura.....0083	AST.....0216	Communications.....0382	Cascade.....0496
Alaron.....0085	Astacom.....0217	Black Panther Line.....4196	Casio.....0499
Alba.....0086	Aston.....0220	Black Star.....0386	CAT.....0500
Alcatel.....0089	Astra.....0221	Blacktron.....3526	Catha.....4094
Alcyon.....0093	Astro.....0224	Blackway.....0388	Cathay.....0501
Aldes.....0094	Asuka.....0227	Blaupunkt.....0390	Catron.....0502
Alize.....0100	ATACOM.....0228	Blue Sky.....0395	CCE.....0504
Alkos.....3523	Atlantic.....0233	Blue Star.....0396	Celestial.....0511
Allantide.....0102	Atori.....0237	Boca.....0399	Centrex.....0516
Allegro.....0103	Auchan.....0240	Boghe.....0400	Centrum.....0519
Allorgan.....0105	Audiosonic.....0264	Bondstec.....0403	Centurion.....0520
Allsat.....0106	AudioTon.....0266	Boots.....0405	Century.....0521
Allsonic.....0107	Aurora.....0274	Boston.....0410	CGE.....0523
Allstar.....0108	Ausind.....0276	BPL.....0413	CGV.....0524
Alltech.....0109	Austar.....0277	Brain Wave.....3692	Changcheng.....0526
Alpha.....0112	Autovox.....0280	Brainwave.....0415	Changfei.....0527
Altai.....3690	Avalon.....0286	Brandt.....0416	Changhai.....0529
Ambassador.....0120	Avious.....0291	Brinkmann.....0423	Changhong.....0530
Amitech.....0130	AVM.....0294	Brionvega.....0424	Channel Master.....0531
Amitronica.....0131	Awa.....0296	Britannia.....0425	Chaparral.....0533
AMOI.....0132	Axiel.....0297		

CHEROKEE.....	0536	Cybermaxx.....	3696
Chess.....	0538	Cybertron.....	0675
Chimei.....	3563	Cyrus.....	0679
Chuangjia.....	4096	D	
Chunfeng.....	0546	Daenyx.....	0690
Chung Hsin.....	0547	Daeryung.....	0691
Chunsun.....	0549	Daewoo.....	0692
Cimline.....	0552	Dainichi.....	0694
Cinetec.....	0560	Dansai.....	0699
CineVision.....	0562	Dansat.....	0700
City.....	0569	Dantax.....	0702
CityCom.....	0570	Darty Box.....	4228
Clarivox.....	0576	Datron.....	4201
Classic.....	0580	Datsura.....	0703
Clatronic.....	0581	Dawa.....	0707
Clyde.....	0588	Daytek.....	0708
Clyde Cablevision.....	3694	Dayton.....	0709
CMS.....	0590	Daytron.....	0710
CMS Hightec.....	0591	D-Box.....	0682
CNT.....	0594	DDC.....	0714
Coby.....	0597	De Graaf.....	0716
Colombia.....	0599	DEC.....	0717
Columbia.....	0604	Decca.....	0718
COLUMBUS.....	0605	Decsat.....	0719
Comag.....	0606	Deitron.....	0722
Comcrypt.....	0610	Delega.....	3697
CommLink.....	0616	Denko.....	0730
Comtech.....	3776	Denon.....	0731
Concorde.....	0626	Denver.....	0733
Condor.....	0627	Denzel.....	0734
Conia.....	0628	Desay.....	0737
Connexions.....	0631	Desmet.....	0738
Conrad.....	0633	Dew.....	0742
Conrad Electronic.....	3695	Diamant.....	0746
Conrowa.....	0634	Diamond.....	0747
Contec.....	0635	Digatron.....	0751
Continental Edison.....	0637	Digality.....	0755
Cosat.....	0645	Digiline.....	0759
Coship.....	0646	Digipro.....	0762
Cosmel.....	0647	Digitor.....	0781
Crosley.....	0655	Digiturk.....	0783
Crown.....	0658	Discoverer.....	0796
Cryptovision.....	0661	Discovery.....	0797
CS Electronics.....	0663	Diseqc.....	3698
CTC.....	0664	Diskxpress.....	0802
C-Tech.....	0449	Distratel.....	0804
CVG.....	3996	Distrisat.....	0805
CyberHome.....	0672	Ditristrad.....	3699

Dixi.....	0807	Emanon.....	0913
DK Digital.....	0808	Emerson.....	0917
Dmtech.....	0813	Emme Esse.....	0919
DNR.....	0815	Emperor.....	0921
DNT.....	0816	Engel.....	0929
DongDa.....	0820	Enzer.....	0934
Donghai.....	0821	Ep Sat.....	0935
Drake.....	0825	Epson.....	0937
Drean.....	0832	Erres.....	0942
DSE(Digital).....	0833	ESC.....	0945
DStv.....	0835	Etron.....	0949
DTS.....	0837	Etzuko.....	4203
Dual.....	0838	EURIEULT.....	0950
Dual-Tec.....	3528	Eurocrypt.....	0952
Dumont.....	0840	Eurodec.....	0953
Dune.....	0841	Eurofeel.....	0954
Duongjie.....	4101	Euroline.....	0955
Dux.....	0843	Euroman.....	0956
D-Vision.....	0684	Europa.....	0957
DVX.....	0847	European.....	0958
Dynasat.....	0852	Europhon.....	0959
Dynatron.....	0855	Eurosat.....	0962
Dynex.....	3476	Eurosky.....	0963
E		Eurospace.....	0964
Easy Home.....	3700	Eurostar.....	0965
Echostar.....	0866	Eutelsat.....	0967
Eclipse.....	0867	Eutra.....	0968
E-Dem.....	3624	Exator.....	0974
Einhell.....	0875	Expert.....	0976
Elap.....	0877	Exquisit.....	0978
Elbe.....	0880	F	
Elbe-Sharp.....	3529	Fagor Life.....	4102
Elcatech.....	0882	Feilang.....	0990
Elcit.....	0883	Feilu.....	0991
Electa.....	3530	Feiyue.....	0993
ELECTRO TECH.....	3531	Fenmenti.....	4103
Electrohome.....	0890	Fenner.....	0994
Electus.....	0894	Ferguson.....	0996
Elekta.....	0895	Fidelity.....	0998
Elektra.....	0896	Filmnet.....	0999
Element.....	3477	Filmnet Cablecrypt.....	3701
ELG.....	0900	Filmnet Comcrypt.....	3702
Elin.....	0902	Filsai.....	1000
Elite.....	0903	Finlandia.....	1003
Elman.....	0907	Finlux.....	1004
Elsat.....	0908	FinnSat.....	1005
Elsay.....	0909	Fintec.....	1006
Elta.....	0910	Firstline.....	1008

Fisher.....	1009	GoldHand.....	1136	Hisawa.....	1247	Interstar.....	1383
Flair Mate.....	1010	Goldline.....	1138	Hisense.....	1249	Intertronic.....	1384
Flint.....	1014	GoldStar.....	1140	Hitachi.....	1251	Intervision.....	1386
FNR.....	1016	Gooding.....	1141	Hitachi Fujian.....	1252	InVideo.....	1388
Formenti.....	1023	Goodmans.....	1142	Hitsu.....	1257	IR.....	4110
Formenti-Phoenix.....	1024	Gorenje.....	1144	HNE.....	1260	Irradio.....	1396
Fortress.....	1027	GPM.....	1149	Hoeher.....	1262	Isukai.....	1402
Foxtel.....	1029	Gradiente.....	1151	Home Tech Industries.....	1266	ITC.....	1404
Fraba.....	1030	Graetz.....	1152	Homecast.....	1268	ITS.....	1405
France Satellite/TV.....	3703	Granada.....	1154	HomeChoice.....	1269	ITT.....	1406
France Telecom.....	1033	Grandin.....	1156	Hongmei.....	1272	ITT Nokia.....	1407
Free.....	4157	Great Wall.....	4105	Hornymphone.....	1277	ITV.....	1408
Freebox.....	1036	Gronic.....	1160	Hoshai.....	1278	J	
Freecom.....	1037	Grothusen.....	1161	Houston.....	1280	Janeil.....	1414
Freesat.....	1038	Grundig.....	1162	Huafa.....	1287	JEC.....	1426
Friac.....	1040	Grunkel.....	1164	Huanghaimei.....	1288	Jerrold.....	1431
Frontech.....	1042	G-Sat.....	1067	Huanghe.....	1289	Jiahua.....	1435
FTE.....	1043	GVG.....	1169	Huanglong.....	1290	Jinhai.....	1439
FTEmaximal.....	1044	H		Huangshan.....	1291	Jinxing.....	1442
Fuba.....	1045	H&B.....	3635	Huanyu.....	1292	Johansson.....	1449
Fugionkyo.....	1046	Haaz.....	1172	Huari.....	1294	JOK.....	1451
Fujitsu.....	1052	Haier.....	1175	Huijiaban.....	4108	JSR.....	1459
Fujitsu General.....	1053	HaiHong.....	1176	Humax.....	1298	JVC.....	1464
Funai.....	1056	Halifax.....	1179	Huth.....	1305	K	
G		Hampton.....	1183	Hygashi.....	1308	Kabel Deutschland.....	1468
Galaxi.....	1068	Hanseatic.....	1190	Hyper.....	1309	Kaisui.....	1471
Galaxis.....	1069	Hänsel & Gretel.....	1173	HyperVision.....	1311	Kamm.....	1474
Galaxisat.....	1070	Hantarex.....	1192	Hypson.....	1312	Kamosonic.....	3535
Gardiner.....	1073	Hantor.....	1193	Hyundai.....	1315	Kamp.....	1475
GBC.....	1078	Hanuri.....	1194	I		Kangchong.....	1476
Geant Casino.....	1082	Harman/Kardon.....	1198	Iberia.....	1320	Kanghua.....	1477
GEC.....	1083	Harting und Helling.....	1201	ICE.....	1324	Kangwei.....	4115
Geloso.....	1087	Harwood.....	1204	ICeS.....	1325	Kansai.....	1480
General.....	1090	Hase & Igel.....	1205	ID Digital.....	1329	Kapsch.....	1483
General Instrument.....	1093	Hauppauge.....	1206	Imex.....	1344	Karcher.....	1484
General Technic.....	1095	HCM.....	1210	Impego.....	4207	Kathrein.....	1486
Genexxa.....	1097	Heliocom.....	1218	Imperial.....	1346	Kathrein Eurostar.....	3707
Gericom.....	1103	Helium.....	1220	Indesit.....	1349	Kawa.....	1487
GFM.....	3820	Hema.....	1222	Indiana.....	1350	Kawasho.....	1489
Giant.....	1113	Hemmermann.....	1223	Ingelen.....	1354	Kendo.....	1500
Giec.....	1115	Hifivox.....	1233	Ingersol.....	1355	Kennedy.....	1504
Global Solutions.....	1120	Higashi.....	1234	Inno Hit.....	1358	Kennex.....	1505
Global Sphere.....	1121	Highline.....	1236	Innovation.....	1360	Kenwood.....	1507
GMI.....	1124	Hikona.....	1237	Interactive.....	3534	Button West.....	1509
Go Video.....	1126	HiLine.....	3533	Interbuy.....	1376	ButtonPlug.....	3646
Goldbox.....	3704	HiMAX.....	1241	Interfunk.....	1377	KIC.....	1512
Golden Channel.....	1133	Hinari.....	1243	Internal.....	1379	Kiiri.....	1513
Goldhand.....	1136	Hirschmann.....	1246	International.....	1380	Kingavon.....	1519

Kingsley.....	1520	Lifesat.....	1632	McMichael.....	1768	Multistandard.....	1904
Kiota.....	1522	Lifetec.....	1633	Mecotek.....	1776	Multisystem.....	4121
Kiss.....	1524	Limit.....	1637	Mediabox.....	1779	Multitec.....	1906
Kiton.....	1525	Lion.....	1643	Mediamarkt.....	1781	Multitech.....	1907
Klap.....	1526	Liteon.....	1645	Mediasat.....	1782	Muratto.....	1910
Kneissel.....	1535	Lloyd's.....	1648	Mediator.....	1784	Murphy.....	1911
Koda.....	1539	Local India TV.....	1653	Mediencom.....	1786	Musikland.....	1915
Kolin.....	1541	Loewe.....	1660	Medion.....	1787	Mustek.....	1916
Kolon.....	1542	Loewe Opta.....	3540	Medison.....	1788	Mx Onda.....	1919
Kolster.....	1543	LogicLab.....	3650	Mega.....	1789	Mysat.....	1923
Konig.....	1547	Logik.....	1661	Meletronic.....	3654	Mystral.....	1925
Konka.....	1548	Lorenzen.....	1666	Melvox.....	1799	N	
Korpel.....	1552	Lorraine.....	1669	Memorex.....	1800	NAD.....	1926
Korting.....	1554	Luma.....	1674	Memphis.....	1802	Naiko.....	1930
Kosmos.....	1557	Lumatron.....	1676	Mercury.....	1804	Nakamichi.....	1932
Koyoda.....	1561	Lupus.....	1678	Metronic.....	1809	Nakamura.....	1933
KR.....	1562	Lux May.....	1680	Metz.....	1810	Naonis.....	1936
Kreismeyer.....	1567	Luxor.....	1683	MiCO.....	1813	National.....	1942
K-SAT.....	1467	Lyonnaise.....	3709	Micro Com.....	3998	Navex.....	1944
KTV.....	1572	M		Micro electronic.....	3656	NEC.....	1950
Kuro.....	1579	M & B.....	3710	Micro Technology.....	1820	Neckermann.....	1951
KXD.....	1581	M/A Com.....	4229	Micromaxx.....	1822	NEI.....	1952
Kyoshu.....	1583	Macab.....	1692	Micromedia.....	1823	Nesco.....	1960
Kyostar.....	1584	Madison.....	1698	Micromega.....	1824	Netsat.....	1966
Kyoto.....	1585	Magnadyne.....	1702	Microstar.....	1827	Network.....	1968
L		Magnafon.....	1703	Microtec.....	1828	Neuf Telecom.....	3999
L&S Electronic.....	1588	Magnavox.....	1706	Migros.....	1832	Neufunk.....	1970
Lafayette.....	1591	Magnex.....	1707	Minato.....	1835	Neuhaus.....	1971
Lasat.....	1597	Magnum.....	1709	Minerva.....	1838	Neusat.....	1974
Lawson.....	1603	Majestic.....	1713	Minoka.....	1840	Nevir.....	1977
Layco.....	4117	Manata.....	1716	Minowa.....	1843	New Tech.....	1979
Lecson.....	1606	Mandor.....	1717	Mitsubishi.....	1855	New World.....	1980
Lemon.....	1614	Manesth.....	1718	Mivar.....	1857	Next Base.....	1983
Lenco.....	1615	Manhattan.....	1719	Mizuda.....	1860	NextWave.....	1988
Leng.....	3708	Marantz.....	1724	Mnet.....	1862	Nicamagic.....	1994
Lennox.....	1616	Marelli.....	1729	Monyka.....	1873	Nikkai.....	1998
Lenoir.....	1617	Mark.....	1731	Morgan Sydney.....	3712	Nikko.....	2000
Lenson.....	1620	Marquant.....	1734	Morgans.....	3970	Noblex.....	2013
Lesa.....	1622	Mascom.....	1738	Morgan's.....	1875	Nobliko.....	2014
Lexus.....	3649	Maspro.....	1739	Motion.....	1877	Nogamatic.....	2016
Leyco.....	1627	Master's.....	1742	Motorola.....	1878	Nokia.....	2017
LG.....	1628	Masuda.....	1744	Movie Time.....	1880	Nomex.....	2018
LG Alps.....	1629	Matav.....	1745	Mr Zapp.....	3713	Noos.....	2019
LG/GoldStar.....	3536	Matsui.....	1750	MTC.....	1889	Nordic.....	2021
Liesenk.....	3537	Matsushita.....	1751	MTEC.....	1890	Nordmende.....	2022
Liesenk & Tter.....	1630	Max.....	1753	MTlogic.....	1892	Nordvision.....	3543
Liesenkotter.....	1631	Maxdome.....	3586	MuDan.....	1896	Normerel.....	2024
Life.....	3538	MB.....	3711	Multichoice.....	1900	Northcoast.....	2026

Nova.....	2031	P	Prinz.....	2260	Reoc.....	2379
Novaplex.....	2034	P&B.....	Profekt.....	4126	Revox.....	2383
Novatronic.....	2035	Pace.....	Profex.....	2269	Revoy.....	2384
Novis.....	2036	Pacific.....	Profile.....	2271	Rex.....	2385
NTC.....	2045	Packsat.....	Profilo.....	2272	RFT.....	2386
NTL.....	2047	Pael.....	Profitronic.....	2273	Rhapsody.....	2387
NU-TEC.....	2048	Palcom.....	Proline.....	2274	Rimax.....	2391
O		Palladium.....	Promax.....	2275	R-Line.....	2327
Oceanic.....	2061	Palsat.....	Prosat.....	2278	Roadstar.....	2398
Octagon.....	2062	Palsonic.....	Prosonic.....	2282	Robotron.....	2401
Okana.....	4122	Panama.....	Protech.....	2284	Roch.....	2402
Okano.....	2065	Panasat.....	Protek.....	2285	Rockdale.....	2403
Omni.....	2074	Panasonic.....	Provision.....	2291	Ronin.....	2412
ONCEAS.....	3544	Panasonic/National.....	PVP Stereo.....		Rover.....	2415
Onida.....	2081	Panavision.....	Visual Matrix.....	2301	Rowa.....	2416
Onimax.....	2082	Panda.....	Pye.....	2302	Rownsonic.....	2417
Onkyo.....	2085	Pathe Cinema.....	Pymi.....	2304	Royal.....	2419
Ono.....	2086	Pathe Marconi.....	Pyxis.....	2305	Royal Lux.....	2420
Onwa.....	2087	Patriot.....	Q		RTF.....	3548
Oopla.....	2088	Pausa.....	Quadral.....	2314	S	
Opera.....	2090	peekTON.....	Quandra Vision.....	3546	Saba.....	2429
Optex.....	2093	Pensonic.....	Quasar.....	2320	Sabaki.....	2430
Optim.....	2094	Perdio.....	Quelle.....	2322	Sabre.....	2431
Optus.....	2100	Perfekt.....	Questa.....	2324	Sagem.....	2434
Orange.....	3866	Philco.....	Quiero.....	3718	Saisho.....	2437
Orava.....	2101	Philharmonic.....	R		Saivod.....	2439
Orbit.....	2103	Philips.....	Radialva.....	2329	Sakura.....	2441
Orbitech.....	2104	Philips Magnavox.....	Radio.....	4128	Salora.....	2443
Origo.....	2110	Phoenix.....	Radiola.....	2330	Sambers.....	2445
Orion.....	2111	Phonola.....	Radiomarelli.....	2331	Sampo.....	2446
Oritron.....	2112	Phonotrend.....	RADIONETTE.....	2332	Samsung.....	2448
Online.....	2113	Pioneer.....	RadioShack.....	2333	Samurai.....	2451
Ormond.....	2114	Pionier.....	Radiotone.....	2334	Sandra.....	2454
Orson.....	2115	Plantron.....	Radix.....	2335	Sansui.....	2458
Orsowe.....	2116	Playsonic.....	Rainbow.....	2339	Sanwa.....	2461
Osaki.....	2118	Pointer.....	Raite.....	2340	Sanyo.....	2462
Osat.....	2119	Polaroid.....	Rank.....	2345	Sanyuan.....	2464
Osio.....	2121	Polsat.....	RBM.....	2350	SAT.....	2470
Oso.....	2122	Poppy.....	RCA.....	2351	Sat Cruiser.....	2472
Osume.....	2123	Portland.....	REC.....	2357	Sat Partner.....	2473
Otto Versand.....	2126	Powerpoint.....	Recor.....	2359	Sat Team.....	2474
Oulin.....	4123	Prandoni Prince.....	Rectiligne.....	2362	Satbox.....	2476
Oxford.....	2131	Precision.....	Rediffusion.....	2364	Satcom.....	2477
		Predki.....	Redpoint.....	2365	Satec.....	2479
		Preisner.....	Redstar.....	2366	Satel.....	2480
		Premiere.....	RedStar.....	2366	Satelco.....	2481
		Priesner.....	Reflex.....	2368	Satford.....	2483
		Prima.....	Regency.....	2371	Satline.....	2484

Satmaster.....	2485	Sinudyne.....	2601	Stern.....	2741	Techniland.....	2872
Satplus.....	2486	Skantic.....	2605	Strato.....	2745	TechniSat.....	2873
Saville.....	2491	Skantin.....	2606	Strong.....	2748	Technology.....	3726
SBR.....	2492	Skardin.....	2607	STVI.....	2751	Technosat.....	2877
ScanMagic.....	2496	Skinsat.....	3722	Stylandia.....	2752	TechnoTrend.....	2879
Schacke.....	3720	SKR.....	2608	Sumida.....	2756	Technowelt.....	2881
Schaub Lorenz.....	2500	Sky.....	2610	Sunkai.....	2762	Teco.....	2886
Schneider.....	2501	SKY.....	2610	Sunny Sound.....	2765	TEDELEX.....	2889
Schwaiger.....	2502	Sky Digital.....	3723	Sunsat.....	2767	Tee-Comm.....	2890
Scientific Atlanta.....	2503	SkyCable.....	2617	Sunstar.....	2768	Teknika.....	2895
Scientific Labs.....	2504	Skymaster.....	2621	Suntronic.....	2770	Telanor.....	3727
Scott.....	2508	Skymax.....	2622	Sunwood.....	2772	Telasat.....	2897
SCS.....	2510	SkySat.....	2625	Super Sat.....	2775	Tele+1.....	2900
Sedea Electronique.....	2518	Skyvision.....	2630	Superla.....	2782	Teleavia.....	2901
Seeltech.....	2519	Skyworth.....	2631	Supermax.....	2783	Teleciel.....	2903
Seemann.....	2521	SL.....	2632	Supersonic.....	2787	Telecom.....	2906
SEG.....	2522	Slim Art.....	2636	SuperTech.....	2789	Telecor.....	2910
SEI.....	2524	SM Electronic.....	2639	Supervision.....	2791	Teledirekt.....	2912
SEI-Sinudyne.....	2525	Smart.....	2642	Supra.....	2792	Telefonica.....	2913
Seleco.....	2528	Sogera.....	2649	Susumu.....	2797	Telefunken.....	2914
Sencora.....	2531	Solavox.....	2654	Sutron.....	2798	Telefusion.....	2915
Sentra.....	2534	Sonawa.....	2663	Sydney.....	2808	Telegazi.....	2917
Sentron.....	4216	Songdian.....	4136	Sylvania.....	2809	Telegent.....	2918
Septimo.....	2536	Soniko.....	2669	Symphonic.....	2810	Telesa.....	2919
Serino.....	2539	Sonitron.....	2671	Synn.....	2813	Telemaster.....	2922
Servi Sat.....	3721	Sonneclair.....	2673	Sysline.....	2815	Telemeister.....	2924
Shanghai.....	2547	Sonoko.....	2675	Systec.....	2816	Telenet.....	2925
Shanshui.....	4133	Sonolor.....	2676	Sytong.....	2820	Telepiu.....	2926
Shaofeng.....	2549	Sontec.....	2677	T		Telesat.....	2928
Sharp.....	2550	Sontech.....	3435	T.D.E. Systems.....	2822	Telesonic.....	2930
Shencai.....	2553	Sony.....	2679	Tactus.....	2825	Telestar.....	2931
ShengCai.....	4217	Sound & Vision.....	2680	Taishan.....	2835	Teletech.....	2934
Shenyang.....	2555	Soundmaster.....	2685	Taisho.....	2836	Teleton.....	2935
Sherwood.....	2557	Soundmax.....	2687	Tandberg.....	2842	Televs.....	2937
Shintom.....	2563	Soundwave.....	2689	Tandy.....	2843	Televideon.....	2938
Shintoshi.....	2564	Spectra.....	2697	Tantec.....	2845	Televue.....	2939
Shivaki.....	2567	SR.....	2704	Tashiko.....	2850	Televiso.....	2941
Shorai.....	2569	Srypton.....	4138	Tatung.....	2852	Telewest.....	2942
Siam.....	2572	Standard.....	2713	TCL.....	2856	Telewire.....	2943
Siarem.....	2573	Star Cluster.....	3724	TCM.....	2857	Temco.....	2946
Siemens.....	2574	Star Trak.....	2720	Teac.....	2860	Tempo.....	2949
Siera.....	2576	Starcom.....	2722	Teachimagen.....	4140	Tennessee.....	2952
Siesta.....	2577	Stargate.....	2723	Tec.....	2861	Tenosal.....	2953
Sigmathek.....	2580	Starland.....	2726	Tech Line.....	2863	Tensai.....	2954
Silva.....	2591	Starlite.....	2728	Techica.....	2865	Tenson.....	2955
Silva Schneider.....	2592	Starmedia.....	2730	Technema.....	2866	Tesmet.....	3550
Silver.....	2594	Starring.....	2733	Technics.....	2869	Tevion.....	2962
Singer.....	2599	Stenway.....	2739	Technika.....	2870	Texet.....	2963

Thomson	2972	Uniden	3101
Thorens	2973	Union	3781
Thorn	2974	Unisat	3104
Tiankeban	4142	United	3106
Tioko	2989	United Cable	3108
Tiscali	3442	United Quick Star	4226
TNT	4184	Unitor	3110
TOBO	2999	Universal	3113
Tocom	3000	Universum	3115
Tokai	3001	Univox	3116
Tokyo	3004	V	
Tomashi	3006	Variosat	3134
Tonna	3011	Vector	3136
Tonsai	4223	Vega	3138
Top Suxess	3013	Ventana	3142
Topfield	3014	Vestel	3148
Torx	3020	Vexa	3149
Toshiba	3021	Via Digital	3729
Towada	3028	Viasat	3153
Towika	4224	Vibrant	3154
Toyoda	3030	Victor	3155
TPS	3032	Videologic	3165
Trakton	3036	Videologique	3166
Trans Contiens	3037	Videon	4227
TRANS-continents	3039	Videosat	3170
Transfec	4143	VideoSystem	3172
Transonic	3041	Videotechnic	3173
Transtec	3042	Videoton	3174
Triad	3049	Videoway	3176
Triasat	3050	VideoWorks	3177
Triax	3051	Vidtech	3179
Trident	3054	Viewmaster	3182
Trio	3056	Viewsonic	3186
Tristar	3057	Viewstar	3187
Triumph	3058	Virgin	4185
TruVision	3061	Visiola	3197
TSM	3065	Vision	3198
Tudi	3068	Visionetics	3199
Turnsat	3071	Visionic	3200
TVA	4225	Visiopass	3203
Tvonics	3080	Visiosat	3204
Twiner	3083	Vistar	3207
U		Vivanco	3209
UEC	3088	Vivid	3210
Uher	3089	Vortec	3217
Ultravox	3095	Voxson	3220
Umax	3098	VTech	3222
Unic Line	3100		

W

Waitec	3227
Waltham	3230
Watson	3233
Watt Radio	3234
Wega	3238
Wegavox	3239
Wela	3730
Welltech	3244
Weltblick	3245
Weston	3251
WeTeKom	3252
Wevasat	3253
Wewa	3254
Wharfedale	3255
White Westinghouse	3258
Windstar	3266
Winersat	3269
Wintergarten	3272
Wisi	3273
Wittenberg	3731
Woorisat	3280
Worldsat	3283
Woxter	3286

X

Xbox	3295
Xcom Multimedia	4000
Xiahua	3299
Xiangyu	3302
Xingfu	3305
Xinghai	3306
Xinrisong	3308
Xlogic	3310
XMS	3312
Xoro	3315
Xrypton	3317
XSat	3318
Xuelian	3320

Y

Yakumo	3324
Yamada	3325
Yamaha	3326
Yamakawa	3327
Yamishi	3328
Yokan	3335
Yoko	3336
Yorx	3340
Yuhang	3345
Yukai	3346

Z

Zanussi	3349
Zaunkonig	3352
Zehnder	3353
Zenith	3356
Zhuhai	3364
Zinwell	3365
Zodiac	3366
Zwergnase	3371

EN Information to the consumer

Compliance with EMF

Koninklijke Philips Electronics N.V. manufactures and sells many products targeted at consumers, which, like any electronic apparatus, in general have the ability to emit and receive electromagnetic signals.

One of Philips' leading Business Principles is to take all necessary health and safety measures for our products, to comply with all applicable legal requirements and to stay well within the EMF standards applicable at the time of producing the products.

Philips is committed to develop, produce and market products that cause no adverse health effects. Philips confirms that if its products are handled properly for their intended use, they are safe to use according to scientific evidence available today.

Philips plays an active role in the development of international EMF and safety standards, enabling Philips to anticipate further developments in standardization for early integration in its products.



Recycling and disposal

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC:



Never dispose of your product with other household waste. Please inform yourself about the local separate collection system for electrical and electronic products. Please act according to your local rules and do not dispose of your old products with your normal household waste. The correct disposal of your old product will help prevent potential negative consequences for the environment and human health.

Battery information

Your product operates on batteries covered by the European Directive 2006/66/EC, which cannot be disposed with normal household waste.

Please inform yourself about the local rules on separate collection of batteries because the correct disposal will help prevent negative consequences for the environmental and human health.

© 2011 Koninklijke Philips Electronics N.V.

All rights reserved. Reproduction in whole or in part is prohibited without the prior written consent of the copyright owner.

The information presented in this document does not form part of any quotation or contract, is believed to be accurate and reliable and may be changed without notice. No liability will be accepted by the publisher for any consequence of its use. Publication thereof does not convey nor imply any license under patent- or other industrial or intellectual property rights.

Document order number: 3139 235 5251 3

February 2011

www.philips.com

RTP/RR/0811